




CANADIAN BLACKBOARD
COMPANY LTD

30, Montée des Bouleaux
St-Constant (Québec) J5A 1B6
Phone: (450) 632-1660
Fax: (450) 632-5449


www.cctn.com

INSTALLATION

Illustration : model 2000 - Display

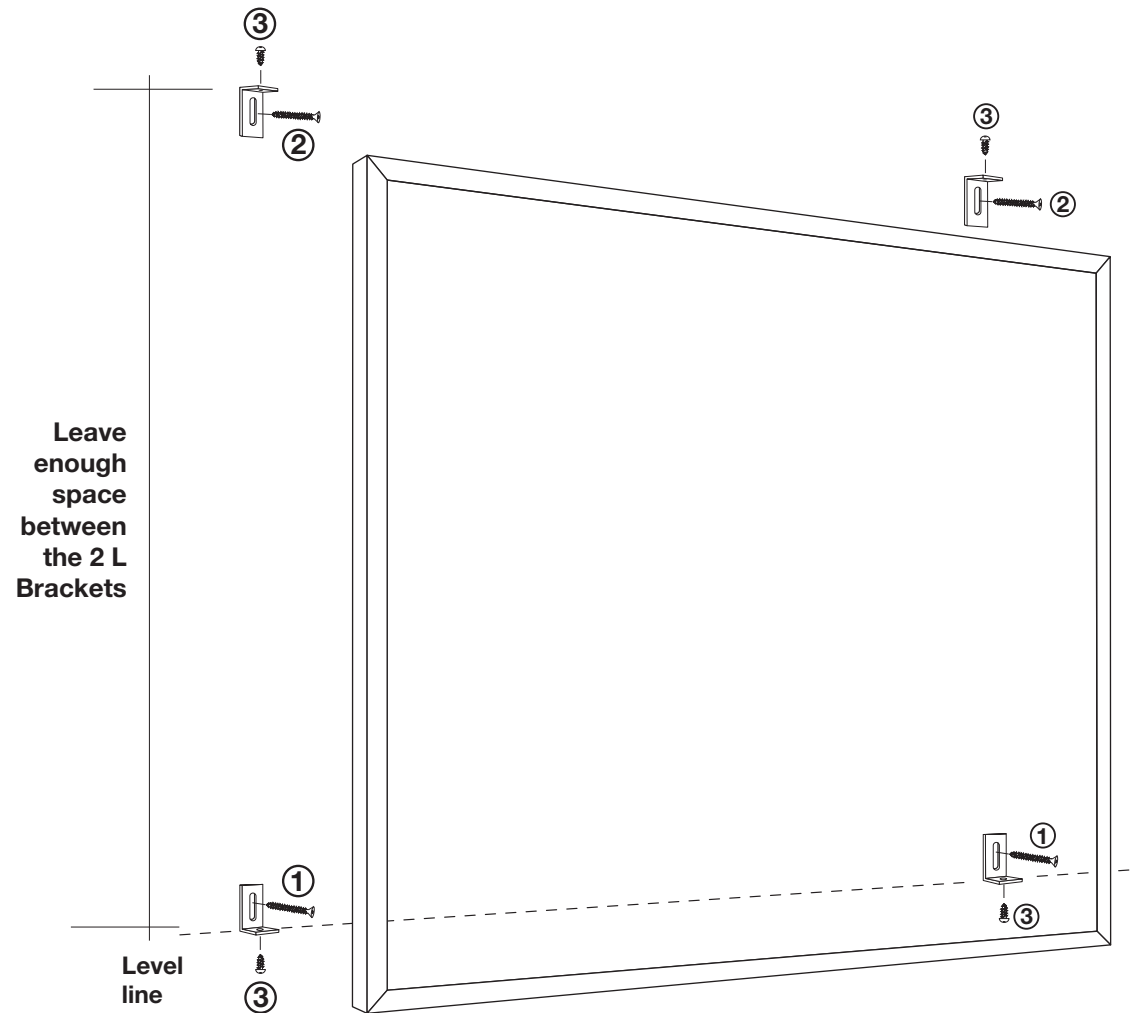

SIDE FACE

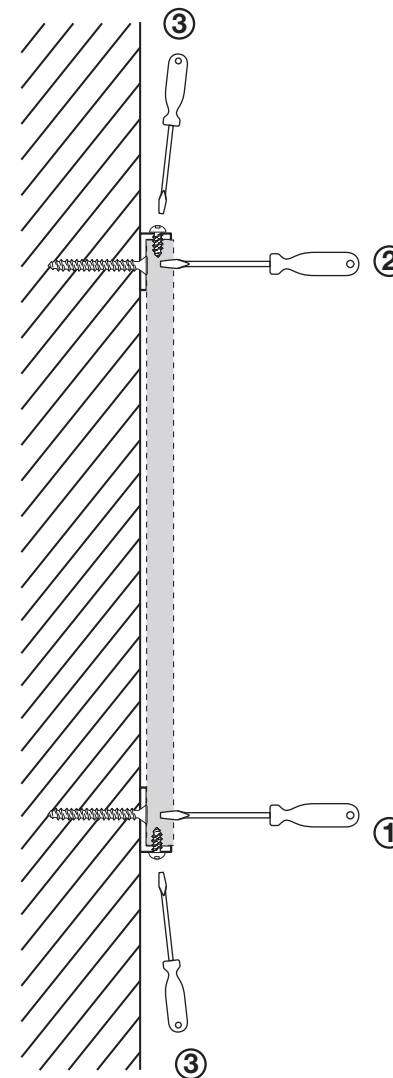

SERIES

40 (1/2 in), 70 (1/2 in), 80, 85,
90 and series 2000 display boards

IN ORDER TO HIDE THE ANCHORAGE ON THE BACK OF THE BOARD,

You need to install the L bracket on the bottom of the wall (1). Use a spirit level to dispose them, this procedure will determine the location of the bottom wall. Repeat the same procedure for the top but leave enough space between the 2 L Brackets so that the board leans correctly on the wall.

Finally install the screws in the moulding of the board.

FOR ANY QUESTIONS REGARDING THE
INSTALLATION, PLEASE DO NOT HESITATE
TO CONTACT US AT 450-632-1660