



Illustration : model 2000

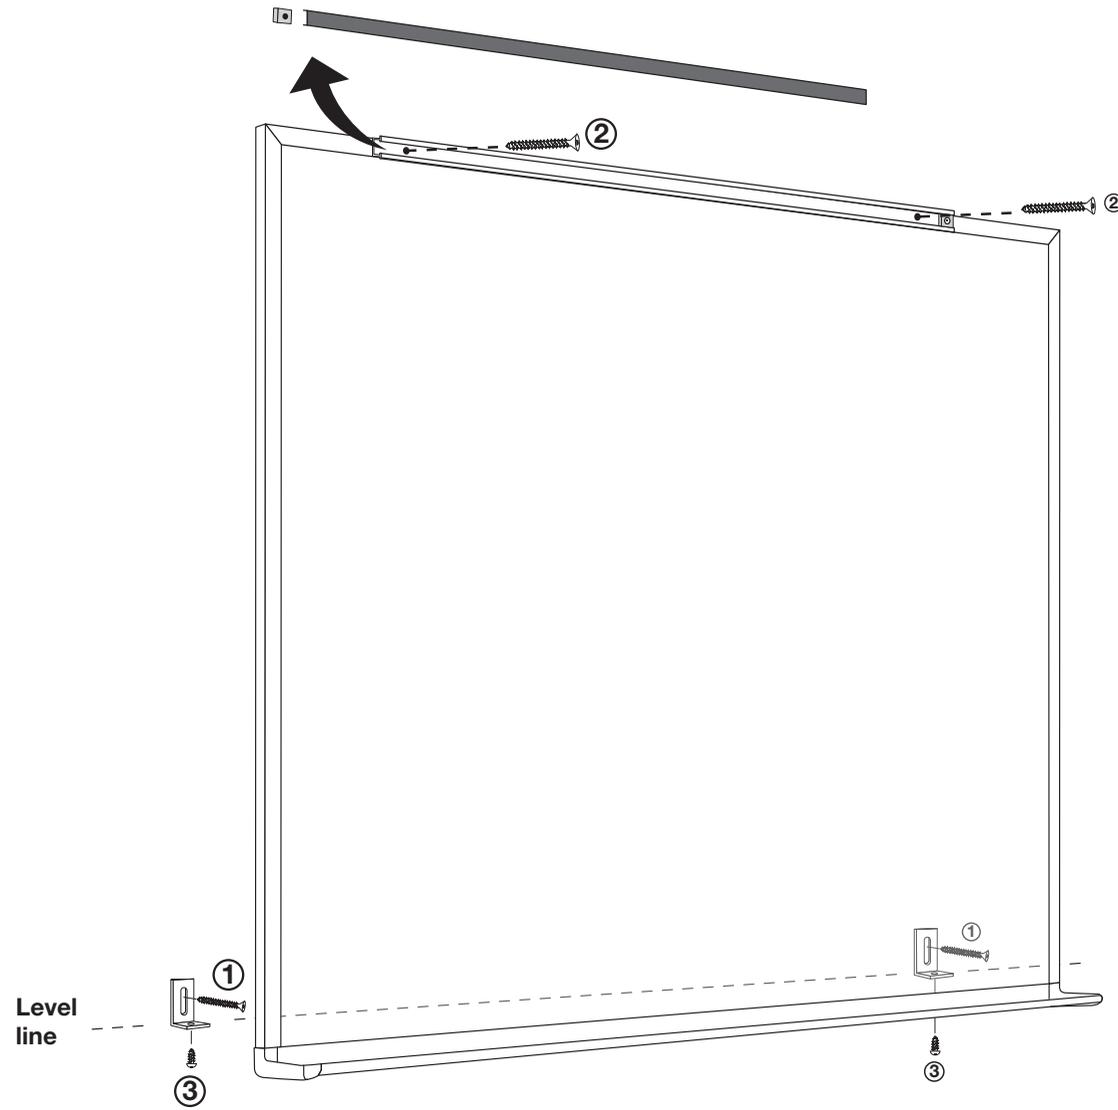

SIDE FACE

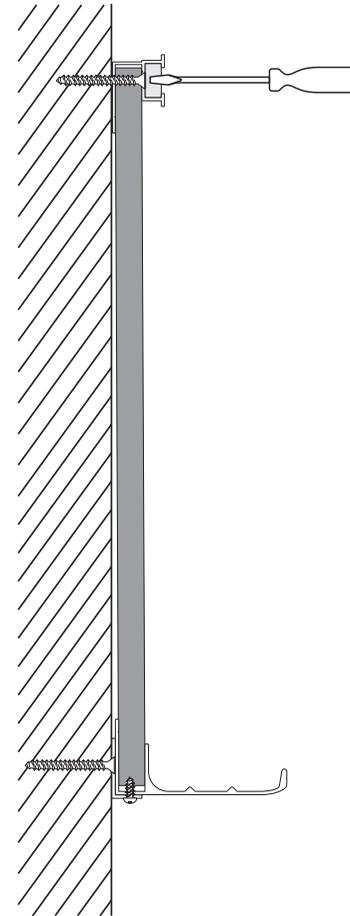

SERIES

2000 Writing

IN ORDER TO HIDE THE ANCHORAGE ON THE BACK OF THE BOARD,

You need to install the L bracket on the bottom of the wall (1). Use a spirit level to dispose them, this procedure will determine the location of the bottom wall.

Then lay the board on the L Bracket, take off the black vinyl insert on the top moulding, screw directly in the moulding and replace the black vinyl insert.

FOR ANY QUESTIONS REGARDING THE INSTALLATION, PLEASE DO NOT HESITATE TO CONTACT US AT 450-632-1660